


Task: Lab-5,

Process:

- 1) Connect 2 hubs to a switch and connect 5 PCs to each hub.
- 2) connect a server to the ~~set~~ switch.
- 3) wait until all connections turn green.
- 4) Assign IP & gateway addresses to all PCs.
- 5) Server ~~also~~ will have the same gateway as the ~~all~~ PCs as they belong to the same network.
- 6) Server → services → DNS, turn on the service and give the name as "www.perseverance.com".
- 7) Server → services → HTTP, in the index.html file, change the content to ~~required~~ "with ~~per~~ perseverance you can achieve anything you wish for".



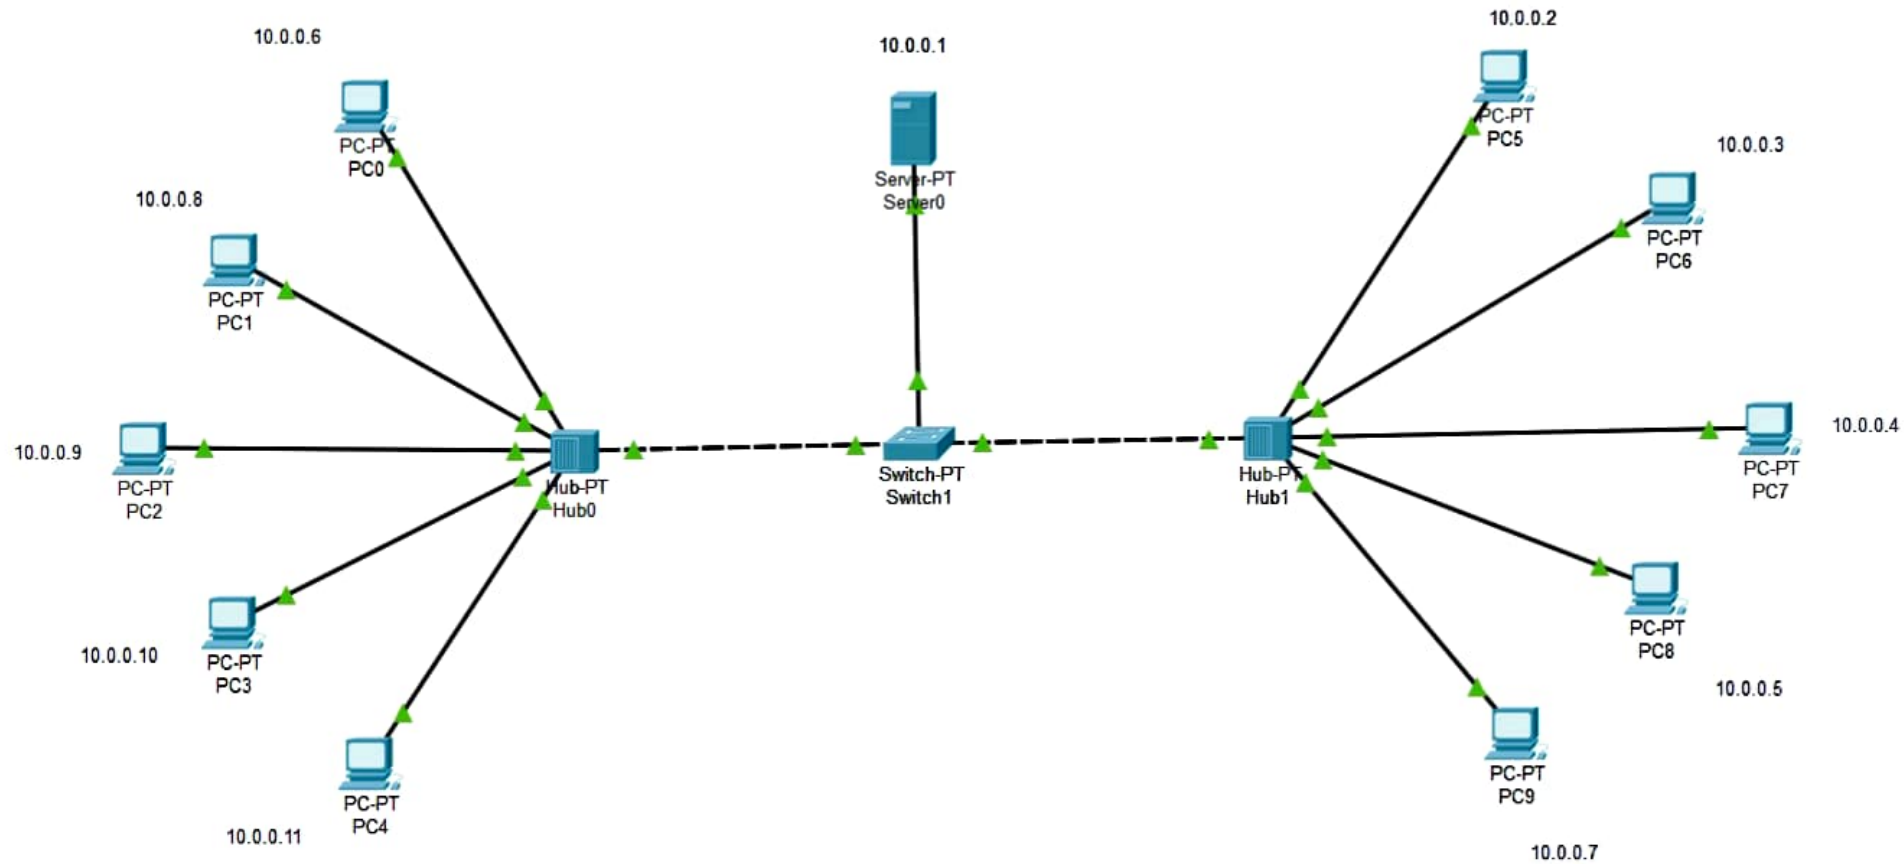

Web Browser

<

>

URL

Go

Stop

Cisco Packet Tracer

With perseverance you can achieve anything you wish for.....

Quick Links:

[A small page](#)

[Copyrights](#)

[Image page](#)

[Image](#)